


Receiver

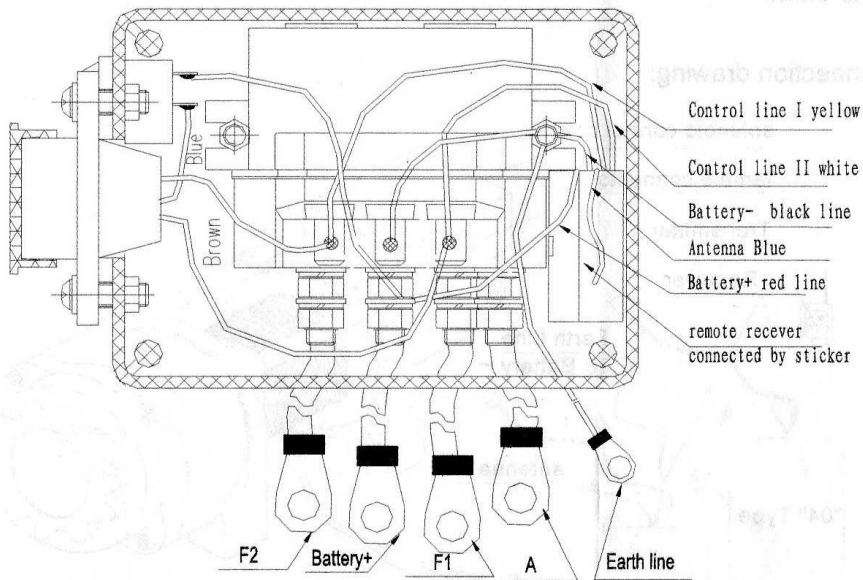

**Trouble Shooting:**

SYMPTOM	POSSIBLE CAUSE	SUGGESTED ACTION
Motor turns, but Winch does not work,	Defective winch.	Check the winch Operating instructions.
Motor does not turn, but you can hear "Click" sound in the receiver	Receiver Loose connections to the winch.	Reinsert all the way.
	False Earth line cinnexion	Ensure the earth connections.
	Defective winch.	Check the winch Operating instructions.
Motor runs in one direction only	Receiver Loose connections to the winch.	Reinsert all the way.
	Defective winch.	Check the winch Operating instructions.
No actions	Receiver and transmitter does not matching.	"01" Type : Code learn. "02" Type : return to the manufacture to rematch.